


Q7

User manual


Sports intercom for riders

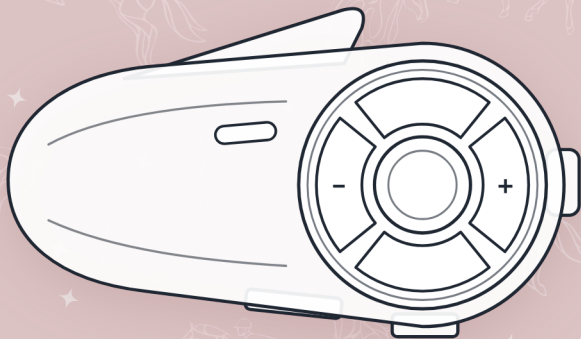


eQuestConnect
SPORTS INTERCOMS

www.equestconnect.com


Device overview

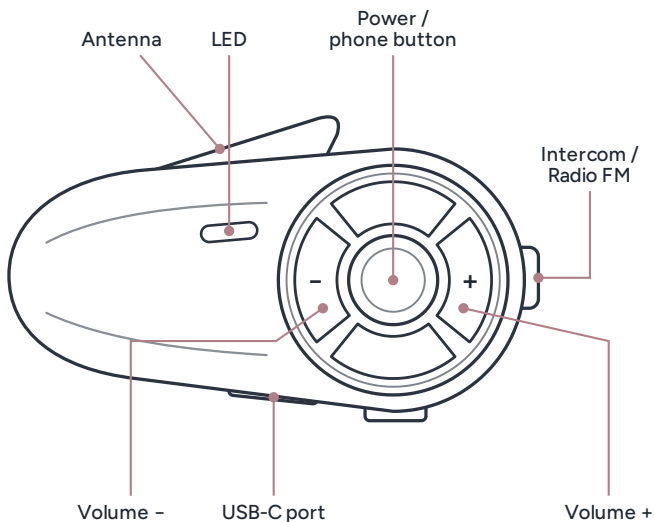

Belt mounting

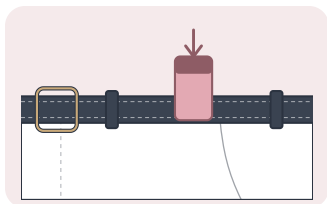

1 Slide the clip onto your trouser belt.

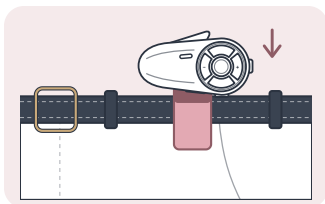


2 Slide the intercom onto the clip from above.

Basic operation

Fully charge the device before first use.

Power on and off

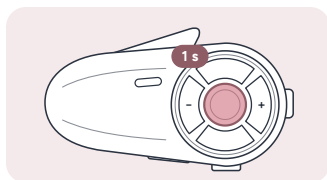


Power on

Hold the power button for 1 s.

● Blue LED flashes

🔊 “beep”

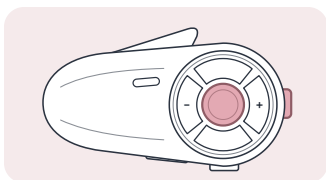


Power off

Press the power and intercom buttons at the same time.

○ LED turns off


Connecting to a paired intercom

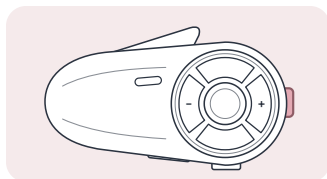

Connect

Press the intercom button.

🔊 “Intercom connected”

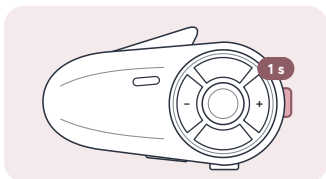


Disconnect

Hold the intercom button for 1 s.

🔊 “Intercom disconnected”


Volume control

Works in every mode: intercom, phone call, music, FM radio.



Quieter

Press -




Louder

Press +

Pairing intercoms

Two devices

Turn on both intercoms and keep them close together.

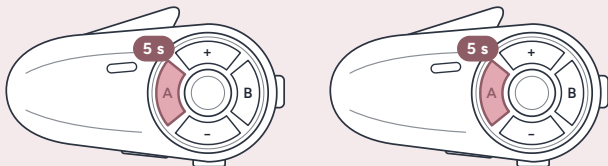

1 On both intercoms, hold button A for 5 s.

● LED flashes red / blue alternately

» *“Intercom pairing”*

2 The devices find each other and pair.

Wait a few seconds.

3 Pairing complete.

● Blue LED flashes


» *“Intercom pairing complete”*

✓ Connected — you can talk.

» *“Intercom A connected”*

Group of 3–7 intercoms

One device is the host, the others are sub-intercoms A–F. The host's button A handles 3 sub-intercoms, button B another 3.

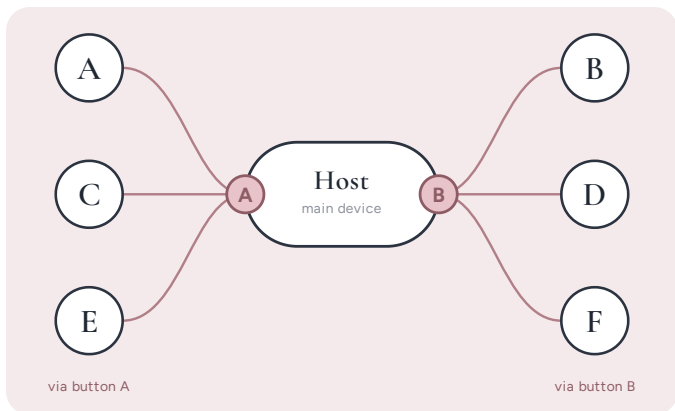

Pairing order

Pair one device at a time, in this order. After each pairing the host confirms, e.g. 🗣️ *“Intercom A connected”*

- 1 (A) Hold **A** for 5 s on the host and intercom A
- 2 (B) Hold **B** for 5 s on the host and intercom B
- 3 (C) Hold **A** for 5 s on the host and intercom C
- 4 (D) Hold **B** for 5 s on the host and intercom D
- 5 (E) Hold **A** for 5 s on the host and intercom E
- 6 (F) Hold **B** for 5 s on the host and intercom F

In group mode, voice prompts are heard on the host.


Choosing who to talk to

Host only. The number of clicks selects which sub-intercom you talk to.

	press 1×	click 2×	click 3×
 Button A	A	C	E
 Button B	B	D	F

 Fast flashing — connecting  Steady flashing — talking

Factory reset

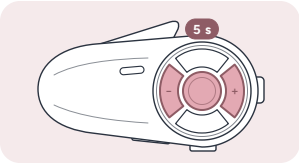


Hold -, + and the power button together for 5 s.


 LED flashes fast 4× alternately

 “Default settings restored”

Other Bluetooth devices

E.g. headsets or other brands' intercoms that support the HFP profile.
Compatibility with every device on the market is not guaranteed.

- 


Hold the intercom button for 5 s.
●● LED flashes alternately
🔊 *"Intercom pairing"*
- 

Press the intercom button to start searching.
●● LED flashes 2×
🔊 *"Searching for devices"*
- 

Start searching on the other Bluetooth device.
- 


Pairing complete.
🔊 *"Intercom pairing complete"*

Battery

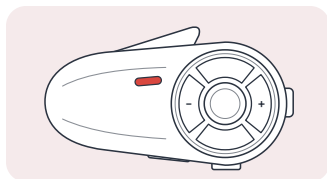

Low battery

- Red LED flashes 2×
- 🔊 *"Battery low"*

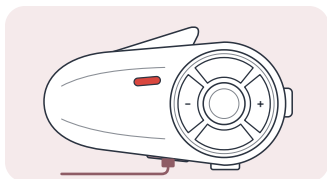

Charging (USB-C)

- Steady — charging
- Off — fully charged

Information

Package contents

eQuestConnect Q7 intercom, dedicated headset with microphone, USB charging cable, mounting accessories, user manual.

Technical specifications

Connectivity	Bluetooth / wireless radio intercom
Frequency	2402–2480 MHz
Power (EIRP)	≤ 10 mW (+10 dBm)
Power supply	built-in lithium-polymer battery, 3.7 V
Charging	DC 5 V, USB-C

Safety

Intended use. This set is designed for wireless voice communication. Before riding, make sure the headset and cables are securely attached, do not restrict head movement and do not interfere with the fit of your riding helmet.

Volume and hearing. Do not use the device at very high volume for long periods. Excessive volume makes it harder to hear your surroundings (your horse, your trainer's instructions, traffic), which creates a risk while riding.

Moisture and charging. The device is splash- and moisture-resistant but must not be submerged. Charge it only with a DC 5 V power supply that meets safety standards, in a dry room.

Simplified EU declaration of conformity

Hereby, eQuestConnect declares that the radio equipment type eQuestConnect Q7 (intercom set) is in compliance with Directives 2014/53/EU (RED) and 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at: https://equestconnect.com/wp-content/uploads/2026/10/Deklaracja_zgodnosci_UE_eQuestConnect_Q7.pdf

Disposal (WEEE)

The crossed-out wheeled bin symbol means that used electrical and electronic equipment and built-in batteries must not be disposed of with household waste. Take it to a designated collection point for recycling. Your local authority can tell you where the nearest collection point is.



eQuestConnect

ul. Narbutta 11, 02-536 Warsaw, Poland

www.equestconnect.com · kontakt@equestconnect.com